



Assembly Instruction

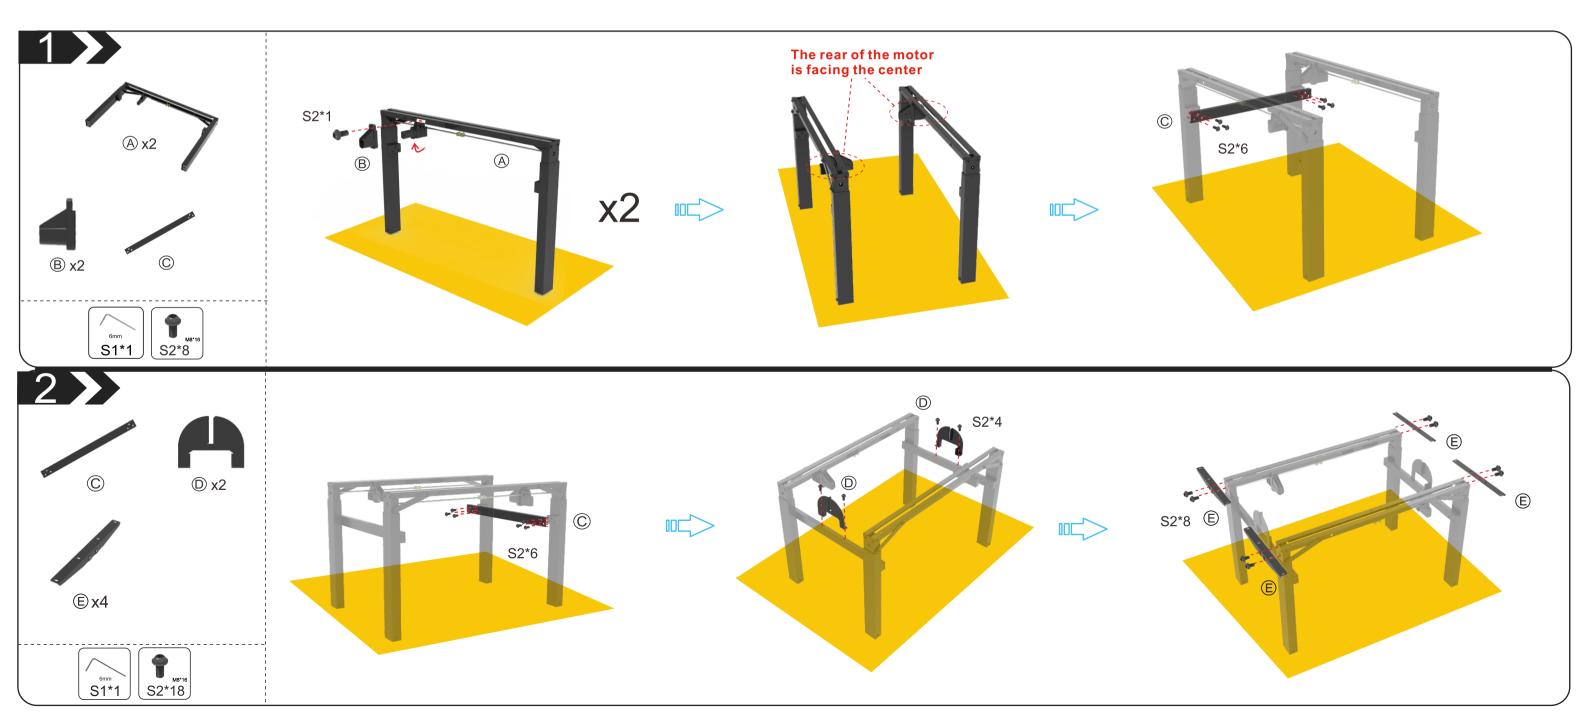

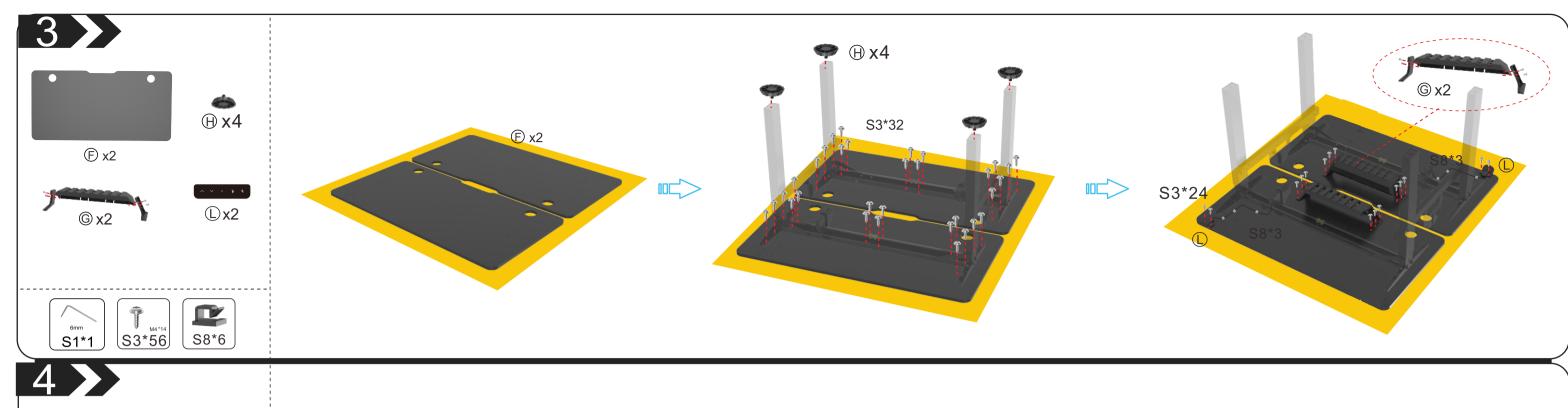

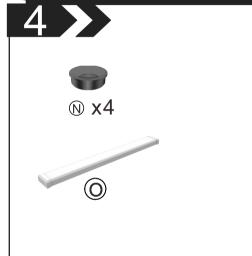


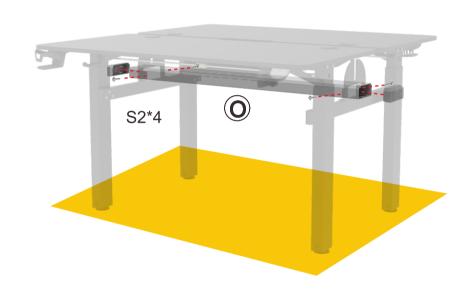







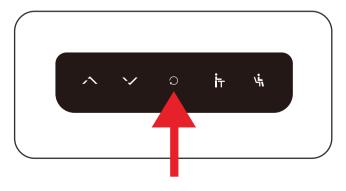






After the table is installed, please press the \bigcirc key to start

Instruction Manual



Notes:

 - 1. Operating voltage: AC100~240V, frequency 50/60HZ
- 2. Operating temperature: -10~40°C.
- 3. Before use, please check whether all power lines are fully connected and firm.
- 4. Before use, please check the surrounding environment and ensure there are no obstructions above or below the table.
- 5. This product is not to be used by children. Adult supervision is required.
- **6.** Do not use if any cables (electrical parts) are damaged.
- 7. The product is not suitable for mobile use. If you must move, please prevent it from being injured.
- 8. It is normal for a slight jitter when the table starts to rise and fall. This will not affect the service life.



Key introduction

Up: Up button	RST:Reset button	Stand: Saving button 1
Down: Down button		Sit: Saving button 2

Up and down button operation

- ◆When the "△" button is pressed, the desktop runs up until reaching the highest height.
- ◆When the "✓" button is pressed, the desktop runs down until it reaches the lowest height.
- ◆When press the " or " w" button, the desktop runs automatically.
- ◆When press the "△" button 3**S**, release the button, automatically reach the highest height, press any button can stop halfway.
- ◆When press the "✓" button 3**S**, release the button, automatically reach the highest height, press any button can stop halfway.

Location Store/Memory Location operation

- ◆ Storage of standing position: press and hold "♠" button for 5 seconds, and the standing position is saved
- ♦ Storage of sitting position: press and hold " button for 5 seconds, and the sitting position is saved
- ◆Stand memory position operation: press the "♠" button, the desktop automatically run to the height of the memory position, and press any buton can stop halfway.
- ◆Sitting memory position operation: press the "ੑੑੑੑੑ button, the desktop automatically run to the height of the memory position, and press any button can stop halfway.

Reset Operation:

◆ Press and hold of for 3 seconds, then release the button to enter reset mode. The desktop automatically down to find the lowest height, then after a 3-second pause, the desktop automatically moves up to find the highest height, pause for another 3 seconds. In the end, the desktop will automatically run down to the fixed position, and the reset process is over.

After the Installation of desk, pls execute this process first.